

# MANUAL NICE TABLE TOP



## TABLE OF CONTENT

1. Packaging	page 2
2. Content of the Box	page 3
3. Safety	page 3
4. Assembly & Installation	page 4
5. Operating Instructions	page 5
6. Maintenance	page 5
7. Bioethanol	page 6
8. Questions and Answers	page 6
9. Symbols of Awareness	page 7

**It is imperative that you read this manual before using the fireplace. Keep the manual in a safe place for further reference.**

It is important that you read the installation and operation instructions and adhere to the safety measures described in this document.

Decoflame ApS cannot be held responsible for any damage caused as a result of non-adherence to these instructions.

Please keep the packaging of your fireplace in case it needed to be sent back to the factory.

## 1. PACKAGING

### Upon receiving the fireplace, take notice of the following:

The fireplace can be packed in:

- 1) A cardboard box with polystyrene inside and placed on a pallet.
- 2) A wooden crate with polystyrene inside and with 50-100mm wooden support for easier handling with a fork- or pallet lift.

### Damages of the packaging

Please check the state of the cardboard box or the wooden crate while the courier is still there for visible damages.

If any damages are visible on the packaging it is **EXTREMELY IMPORTANT** to write a report remark about them on the delivery note, in the presence of the courier. Afterwards it is very important to contact Decoflame immediately with the following documentation:

- 1) Photos of all 4 sides of the pallet or wooden crate / cardboard box.
- 2) A description and explanation of the damage.
- 3) A copy or a photo of the delivery note from the driver/courier with the written remark and tracking number.

Contact the courier company immediately and inform them about the damage. Please remember to inform the tracking number.

Hereinafter Decoflame will contact you within the following 3-5 working days.

*When you remove the fireplace from the pallet or take it out of the box, please follow the instructions below carefully.*

### Unpacking the fireplace

Lift or drive the whole box or crate as close as possible to the place where the fireplace is going to be mounted or installed.

Open the box or wooden crate carefully without causing scratches or damages. We recommend use of drilling machine with TX20 or screw driver. Make sure that you slowly and carefully take out the fireplace and place it down on a flat surface without dropping it.

Please make sure that every item or part is wrapped out of the foam foil. If anything is missing please contact Decoflame immediately or send an email describing the missing parts together with photos of the contents in the box.

It is very **IMPORTANT** to keep the wooden crate or the cardboard, in case the fireplace will need to be returned to Decoflame for service or repair. In the situation where the original packaging is not available anymore, Decoflame can send a new wooden crate. For further information about the costs, please contact Decoflame.

### Damages of the Fireplace

If the packaging is not damaged and corresponding to the images sent by Decoflame with the tracking number, the wooden crate/cardboard box can be open.

If you notice any damage on the fireplace, the following information needs to be sent with Decoflame:

- 1) Photos of all 4 sides of the pallet / wooden crate AND the fireplace.
- 2) A description and explanation of the damage.
- 3) A copy or a photo of the delivery note from the courier with the written remark and tracking number.
- 4) Contact the courier and inform them about the damages. Please remember to inform the tracking number.
- 5) Contact Decoflame by email and enclose all documents according points 1-4. Please remember to inform the tracking number and order number - up to 5 digits (The order number can be found on the delivery note from Decoflame or from your retailer).

*The deadline for claiming transport damages is maximum 3 working days from the date of delivery.*

Contact information at Decoflame:

Decoflame ApS  
Vang Mark 2  
9380 Vestbjerg  
Denmark  
Tel. +45 96 30 48 00

(Opening hours: Mon-Thur. 08:00-16:00 and Fri. 08:00-15:30 Danish Time)  
Email: [logistic@decoflame.dk](mailto:logistic@decoflame.dk)  
Attention line in the email: Order number (Up to 5 digits).

Decoflame refers to The Generals Sales and Delivery Terms. If any questions or doubts please contact Decoflame or local retailer.

## DO NOT


1	<b>DO NOT</b> open the box or wooden crate with sharp objects.
2	<b>DO NOT</b> flip the cardboard box or wooden crate on the sides or on the top. The arrow stickers <b>MUST</b> be followed carefully.
3	<b>DO NOT</b> use a hammer or other hard objects.
4	<b>DO NOT</b> use saws or other similar objects.
5	<b>DO NOT</b> smoke near the fireplace as there might be bioethanol
6	<b>DO NOT</b> lift in the parts which are sensitive to lifting and bending.

## 2. CONTENT OF THE BOX




**A1**

Nice Round Table-Top

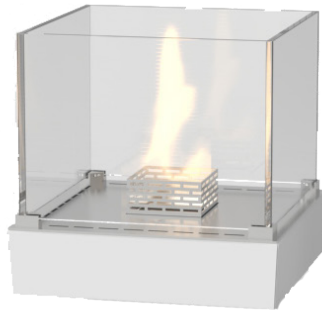

**A2**

Nice Tower Table-Top

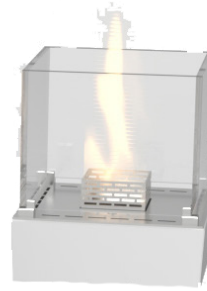


**A3**

Nice Lounge Table-Top

A1:	1	Nice Round Table-Top
A2:	1	Nice Tower Table-Top
A3:	1	Nice Lounge Table-Top
B:	1	Handle
C1:	1	Lid for burner opening
C2:	1	Lid for burner opening
C3:	1	Lid for burner opening
D:	1	Manual



**B**

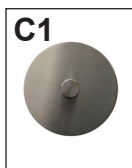


**C1**

OR




**C2**

OR

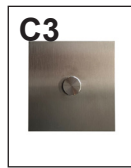

**C3**

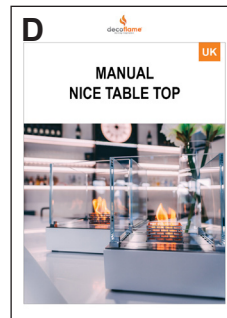

**D**

## 3. SAFETY

Naturally, safety is imperative when dealing with open fire. Nice Table Top™ is designed, manufactured and quality-tested with highest product safety and user-friendliness in mind. **DO NOT** use it without the glass surround, the lid or the handle.

In case you plan to use Nice Table Top™ indoors, please consult local regulations and laws, which might restrict indoors use of bioethanol fire.

Your Decoflame fireplace has been technically engineered to offer not only beautiful design, but also functionality and safety.

**DO NOT** amend, add or omit any parts or components of this fireplace as this will void your warranty.



Do not fill fuel into the open flame



Do not fill fuel into the hot burner

### ATTENTION

1	Choose a position for your fireplace which is not exposed to any draught, as bioethanol is a volatile fluid. In fact, only the vapors of the bioethanol are burning when lit.
2	Choose a solid ground surface, where the fireplace stands in a secure and level position.
3	When choosing a suitable position for your fireplace please also consider keeping it out of reach of smaller children and pets.
4	For safety reasons always keep a <b>safety distance</b> of at least 40 cm (16 in) from a lit fireplace.
5	May <b>ONLY</b> be used with the glass cylinder.
6	<b>ONLY</b> adults may light and extinguish the flames.
7	You should not touch the flames of the lit fireplace or blow into the flames, as this will cause the flames to escape from the fireplace and become uncontrollable.
8	When lit, the surfaces of the upper part of the burner as well as the safety glass will be warm. <b>Avoid</b> touching those surfaces.
9	<b>NEVER</b> leave the fireplace unattended when it is lit.
10	Are there children or pets around? If so, make sure an adult <b>keeps an eye</b> on them at all times during the operation of your fireplace.
11	<b>ALWAYS</b> have the lid and the handle nearby!
12	<b>ALWAYS</b> light and extinguish your Decoflame® fireplace in a safe manner.



## 4. ASSEMBLY & INSTALLATION

### A1: NICE ROUND Ø338xH358mm

Heat efficiency:	2.1 kW/h
Weight:	8.3 kg
Burner volume:	2.3 litres of bioethanol. Only use bioethanol of at least 96,5% to max 97,5% for Decoflame® fireplaces.
Burning duration/consumption:	One burner filling will last up to 6 hours, depending on flame intensity and air flow.

### A2: NICE TOWER TABLE TOP 345X330X345mm


Heat efficiency:	1.5 kW/h
Weight:	12.7 kg
Burner volume:	1.7 litres of bioethanol. Only use bioethanol of at least 96,5% to max 97,5% for Decoflame® fireplaces.
Burning duration/consumption:	One burner filling will last up to 6 hours, depending on flame intensity and air flow.

### A3: NICE LOUNGE TABLE TOP 250X280X250mm

Heat efficiency:	1.2 kW/h
Weight:	7.5 kg
Burner volume:	1.3 litres of bioethanol. Only use bioethanol of at least 96,5% to max 97,5% for Decoflame® fireplaces.
Burning duration/consumption:	One burner filling will last up to 6 hours, depending on flame intensity and air flow.

## POSITIONING

<b>1</b>	<b>Used outdoors:</b> Secure that you position the fireplace on a level, solid ground surface with a distance of at least one metre (40 in) from curtains, sun shades and similar textiles or other flammable objects. (It should not be kept exposed the elements). The fireplace must always be stabilized.
<b>2</b>	<b>In case of indoor using :</b> <i>Please consult local regulations and laws, which might restrict/forbid indoors use of this type of bioethanol fire.</i> Secure that you position the fireplace at a safe place on a level, solid ground surface with a distance of at least one metre (40 in) from furniture, curtains or other inflammable objects. It should not be kept exposed to any draught as bioethanol is a volatile fluid. The fireplace must always be stabilized. <b>DO NOT</b> place any valuable paintings or electronic equipment like TV screens or speakers above the fireplace. The warm air from the fire will rise upwards and might damage anything in its way.

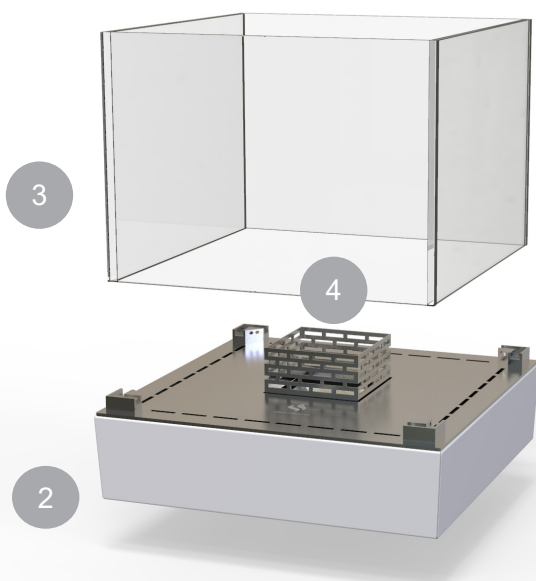

### STEP 1:

Take the fireplace out of the box.

### STEP 2:

Place the burner on a level surface.

### STEP 3:

Carefully place the glass on the burner.

### STEP 4:

Fill in with bioethanol to max level.

### STEP 5:

Light up the fireplace using a long lighter.

## 5. OPERATING INSTRUCTIONS

Nice Table Tops are designed and manufactured exclusively for use with liquid bioethanol of highest purity (96.5 - 97.5%). DO NOT use any other fuel or materials or bioethanol of inferior quality as this will void your warranty.

### Filling and lighting

The fireplace must **ONLY** be lid up when it is cold!

1. Purchase the bioethanol in a specialist shop or online.
  2. Remove the burner lid from the burner.
  3. Remove the safety glass from the burner and position it safely and carefully on a soft surface in order not to chip its edges.
  4. Open a bottle of bioethanol and fill the fuel into the burner opening until the liquid becomes visible. (To a level of max 2mm or to max. indicator). We recommend using a funnel, in order to avoid spilling.
  5. Use a paper towel in order to wipe off any excess bioethanol from the burner and surrounding surfaces.  
Then, wash your hands thoroughly BEFORE lighting the bioethanol vapours with a long lighter, minimum 140mm between ignition point and handle.
  6. Reposition the safety glass surround onto the burner.
  7. **DO NOT** smoke when filling the burner with bioethanol.
  8. **DO NOT** – under any circumstances – refill the burner when it is in use or still hot from previous use.
- IMPORTANT!** Wait around 30 - 60 minutes or until you are certain that the burner has cooled down before you refill it with bioethanol.

### Extinguish

9. Ideally, you allow all of the bioethanol in the burner to be burnt. Should you extinguish the fire at a time when there is still bioethanol left in the burner, it is recommended that you wait until it is cooled down (takes around 30 - 60 minutes) and then fill up the burner once again as described under point 2 to 8 above.
10. If you wish to extinguish the fire before the burner is empty, please **ONLY** use the following method: Attach the extra long handle to the knob on top on the burner lid and lower the lid into the burner opening. Leave it there. The oxy supply to the fire is interrupted and the flames are extinguished.
11. **DO NOT** attempt to blow out the fire!
12. The safety glass surround and the metal surfaces of the burner can become warm during use.  
**DO NOT** touch these parts to avoid burning. – As for all real fires - keep children away from it!

### Overfilled

Please be aware that the fireplace must be completely cold before you can empty the fireplace of bioethanol. If overfilled, **DO NOT** light the fireplace. If the overfillings is not violent, the excess bioethanol can be wiped up with a lint-free cloth or paper towel until the liquid is at the required level. For larger overfills, take the fireplace (wear rubber gloves) and carefully pour the bioethanol into a container (bucket, bowl or similar – you can discard it into the toilet or kitchen sink and flush it away with water as it is only alcohol). Wipe all the fireplace **thoroughly** with a lint-free cloth or paper towel.


### In case of fire follow these guidelines:

We recommend keeping the proper fire extinguisher next to the burner.  
**Suitable extinguishing agents:** carbon dioxide CO2, dry chemical, powder, foam, chemical foam, alcohol-resistant foam, water spray. For small fires use chemical agents, carbon dioxide (CO2), water mites or alcohol resistant foam.


For larger fires use alcohol resistant foam or water spray. Water is not effective. Do not rinse the floor with water.

Vapors can travel above the surface to the remote ignition source and cause the restart of the ignition.


**Unsuitable extinguishing agents:** Water jet.

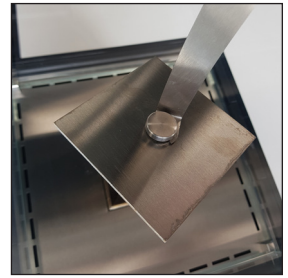

1. Lift off the lid

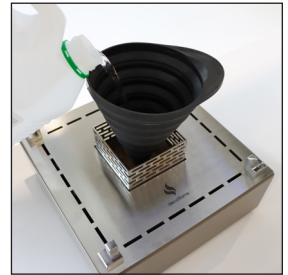

2. Place the funnel and fill with bioethanol

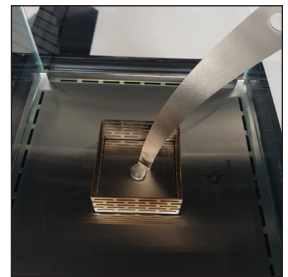

3. TURN OFF: Carefully place the lid on the burner.

*The images shown are with Decoflames bioethanol cans.*



## 6. MAINTENANCE

The safety glass surrounding your Nice Round Table Top™ fireplace is made of tempered heat-resistant glass. The safety glass surrounding your Nice Lounge and Tower Table Top™ fireplace is made of tempered heat-resistant glass. Both the glass part as well as any metal parts, which are exposed to the heat of the fire, might slightly change colour or structure. *This is to be considered normal wear and tear* and does not constitute a product flaw or fault. We recommend that you clean all parts of your outdoor fire frequently with a lint-free cloth or kitchen paper towel and a non-abrasive detergent, some bioethanol or another alcohol-based product.

### DO NOT

1	<b>DO NOT</b> light the bioethanol if you have over filled the burner.
2	<b>DO NOT</b> fill the burner with bioethanol until the temperature is below 40 degrees.
3	<b>DO NOT</b> smoke when filling the burner with bioethanol.
4	<b>DO NOT</b> under any circumstances – refill the burner when it is in use or still hot from previous use.
5	<b>DO NOT</b> attempt to blow out the fire or blow into the flames, as this can cause the flames to escape from the fireplace and they will be uncontrollable.
6	<b>DO NOT</b> cover the fireplace when lit.
7	<b>DO NOT</b> place any flammable materials or clothes on the fireplace.
8	<b>DO NOT</b> place anything on top of the burner.
9	<b>DO NOT</b> decorate the burner with ceramic pebbles or other items as this will lead to overheating and damage to the glass surround.
10	<b>DO NOT</b> place any pebbles or stones on the burner as these can crack and might cause injury or damage to the fireplace.
11	<b>DO NOT</b> use the burner as a barbecue! It is not suited to roast anything.
12	<b>DO NOT</b> touch the flames.



## 7. BIOETHANOL

BIOETHANOL IS EXTREMELY FLAMMABLE!

### Storing conditions

Always thoroughly follow the instructions on the packaging of the bioethanol. The bioethanol must be stored safely and out of the reach of children!

Only store in original and correctly labeled containers. Keep containers tightly closed. Store in a cool, dry and ventilated room away from ignition sources, oxidizers and non-compliant materials. Provide preventive measures against the generation of static charge. The bioethanol must be at room temperature before it can be ignited.

### Safety measures

Preventive measures: Avoid inhalation of vapors. Avoid contact with eyes, skin and clothing. Persons who are prone to skin allergies or lung disease should not come into contact with bioethanol. Use standard precautions for working with chemicals.

### Measures to prevent fire

Due to the high flammability of the product strictly follow the special fire protection measures at the storage location. Protect containers from overheating.

Bioethanol should be stored in a fireproof container and out of the reach of children.

Prevent bioethanol from coming in contact with heat, sparks and flames. Keep away from non-compliant materials such as metal or alkali.

Flash point 13°C / boiling point 78°C. The fireplace can be difficult to start, if it is below room temperature.

## DO NOT

1	DO NOT use any other fuel, materials or bioethanol of inferior quality as this will void your guaranty.
2	DO NOT use any solvents or oils to your bioethanol as this will void your guaranty.
3	DO NOT mix bioethanol with other fuels as this will void your guaranty.

### Denatured Bioethanol is classified as:

Flammable Liquid Class 1B (for Flammability)

Class 3 PGII (for Transportation)

UN1170 (Identification Code)

Regulated by various standards around the world.

You must familiarise yourself and comply with these regulations in order to safely and legally store, handle, decant and use this fuel.



## 8. QUESTIONS AND ANSWERS

### 1. Where can I position Nice Table-Top™?

Nice Table Top™ is primarily intended to be used outdoors on a terrace or balcony or in the garden on a stable, level surface. Keep the fire away from blowing curtains and other inflammable materials which the wind might blow into the flames.

### 2. Is it difficult to assemble Nice Table-Top™?

No, it is easy. Just follow the instructions as shown in the "Assembly" chapter.

### 3. Is the fireplace ready for use after unpacking?

Yes, once it is placed on a level surface in accordance with the instructions given herein, the only thing you need to add is denatured bioethanol.

### 4. What is the best way to light the fireplace?

Remove the safety glass surround from the burner and position it carefully on a soft surface (to avoid chipping of its edges). Fill bioethanol into the burner until the bioethanol is visible between minimum and maximum.

DO NOT overfill/spill bioethanol. Should you accidentally spill bioethanol make sure to remove it before lighting the fireplace. Use a long fireplace lighter to light the vapours of the bioethanol. Reposition the safety glass surround on the burner.

### 5. What is bioethanol?

Bioethanol is alcohol which is made by means of fermentation of organic, sustainable and environmental-friendly raw materials such as corn, potatoes and sugar cane.

This alcohol is then denatured, i.e. made unfit for human consumption. During combustion, water vapour and carbon dioxide are created.

Only the vapour of the bioethanol burns. The bioethanol boils around 78°C (172.4°F) and the flash point is 13°C (55.4°F). The bioethanol gas is heavier than air, so it will always remain on top of the surface of the liquid bioethanol.

Make sure that you keep the fuel in a safe place out of reach of children. Denatured Bioethanol is classified as a Flammable Liquid Class 1B (for Flammability) and Class 3 PGII (for Transportation) and is regulated by various standards around the

world. You must familiarise yourself and comply with these regulations in order to safely and legally store, handle, decant and use this fuel.

All Decoflame fireplaces can be operated only with bioethanol of at least 96.5% but not more than 97.5%. We recommend Decoflame bioethanol, which has an alcohol percentage of 96.5%.

### 6. Is it dangerous to inhale the gas that is developed during combustion?

When burning, bioethanol is dissolved into nothing else but water vapour and CO<sub>2</sub> (carbon dioxide). The amount of CO<sub>2</sub> which is released corresponds to the one of 2 stearine candles of medium size. As the combustion temperature of your bioethanol fire lies below 400°C, no other harmful substances are released during combustion.

### 7. Can paper and wood be used as fuels for Nice Table-Top™?

No, you may only use bioethanol of at least 96.5 - 97.5% purity in the burner.

### 8. How can the flame be extinguished when the fireplace is lit?

Ideally, you allow all of the bioethanol in the burner to be burnt. If you wish to extinguish the fire before the burner is empty, please ONLY use the following method: Attach the extra long handle to the knob on top on the burner lid and lower the lid into the burner opening. Leave it there. The oxygen supply to the fire is interrupted and the flames are extinguished. DO NOT attempt to blow out the fire!

DO NOT touch or remove the glass as it is warm.

### 9. What about disposal of the fireplace?

If you wish to dispose of the appliance, please adhere to the regional rules and regulations.

You will find, that most parts of your Decoflame fireplace can be recycled.

## 9. SYMBOLS OF AWARENESS



Do not fill fuel into the open flame



Do not fill fuel into the hot burner



No smoking



Do not position the fireplace near combustible items



Protect fireplace against draft




Never blow the fire



Do not touch the flames



Keep suitable extinguishing agent ready

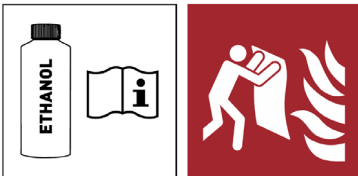

Adhere to instructions about fuel and fireblanket



Warning - flammable material



Health hazard

**The package will include:**

A1:	1	Nice Round Table-Top	
A2:	1	Nice Tower Table-Top	
A3:	1	Nice Lounge Table-Top	
B:	1	Handle	
C1:	1	Lid for burner opening	
C2:	1	Lid for burner opening	
C3:	1	Lid for burner opening	
D:	1	Manual	

Decoflame ApS

Date

**FAQ:**

<https://www.decoflame.com/service>

*Follow the Fire Authorities and national and local requirements regarding bioethanol fireplaces.*

*Subject to product and glass tolerances, typographical errors and technical errors.*

*Decoflame ApS reserves the right to make changes without notice.*

*We refer to Decoflame's General Terms of Sale and Delivery.*

V030924